

# **ERASABLE MARKERBOARD – INSTRUCTIONS**

## **General Care – Cleaning**

Your erasable markerboard is an amazingly effective communication product that will give you years of lasting service if you follow these instructions.

We recommend that you clean your markerboard with markerboard cleaner before initial use. This will remove any residue that may remain on the surface of the board. Rinse thoroughly with clean water and dry with a soft cloth.

Completely erase your board after each day's use. The longer marks remain on the board, the more difficult they become to erase. Stubborn, old marks can be erased by marking over them with your black erasable marker.

For general cleaning, simply wipe your board clean with a soft, wet cloth. If further cleaning is necessary, use Ghent's "Sparkleen" Markerboard Cleaner, rinse thoroughly with clean water and dry with a soft towel

## **Erasable Markers**

The erasable marker has a solvent base that dries quickly. This is the key to its erasability. As a result, the markers should be kept tightly capped when not in use. If the cap is left off, the tip will go dry. If this happens, it may be possible to re-wet the tip. Cap the marker, turn it tip-down and shake vigorously for 20 seconds. Also, you may store the marker tip-down overnight. With proper care, this marker will have a very long life as compared to regular markers. The erasable marker is designed specifically to mark on erasable markerboards. It is not recommended for use on other surfaces.

## **GHENT MANUFACTURING INC.**

2999 HENKLE DR. – LEBANON, OHIO 45036 - 18005430550

FORM NO. ISMB8003-G  
Revised 4/02