


# Partition Extender / PE-CROWN-X

## Clip installation for domed partition


### Installation Instructions

**Step 1:** Unpack the Plastic clip and set next to the Assembled clamp, Acrylic panel, and Hardware.


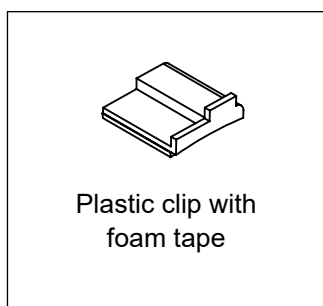


Note: Custom sizes with panel width larger than 72" will require 4 plastic clips. Standard sizes with panel width larger than 48" will require 3 plastic clips, all smaller sizes will require 2 plastic clips. Refer to IS-PE-A for panel installation instructions.

**Step 2:** Place the Plastic clip onto the center of the domed partition as shown.

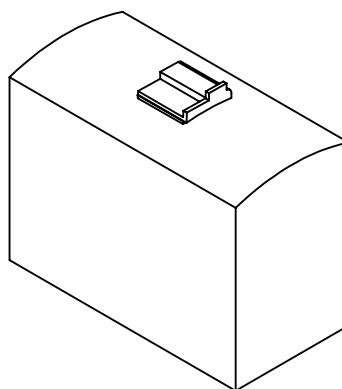

**Step 3:** Lower the clamp onto the plastic clip as shown. Rest the front bracket onto the lower step of the plastic clip. Adjust clip placement as needed.

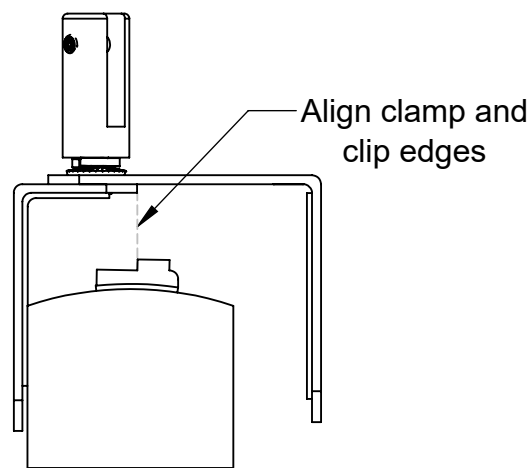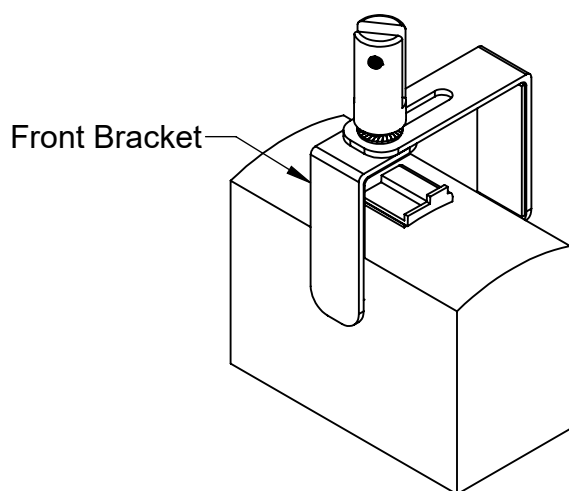


# Partition Extender / PE-CROWN-X

## Clip installation for domed partition


Installation Instructions



**Step 4:** Pinch both sides of the clamp on to the partition walls. Then tighten the panel bracket until the channel is aligned with the partition as shown.

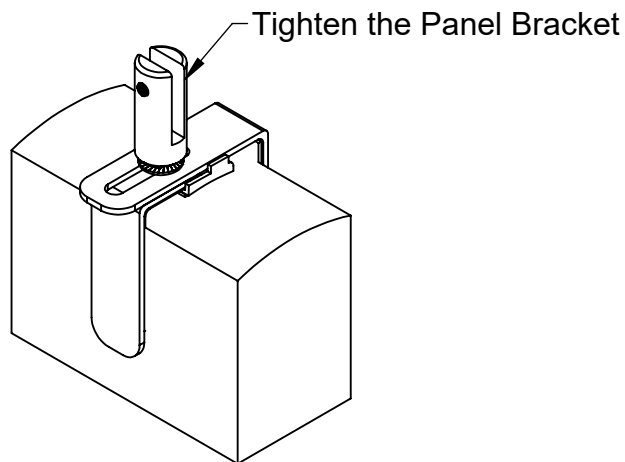

**Step 5:** Slide the acrylic panel into the panel bracket. Secure the panel by tightening the set screw in the panel bracket with the provided Allen wrench.

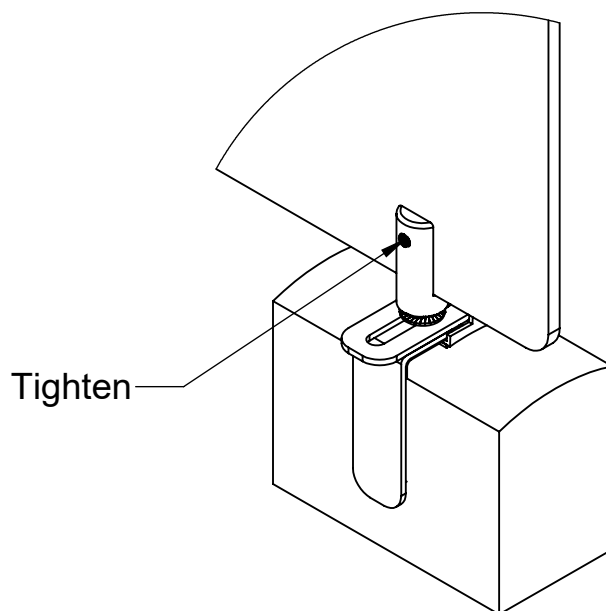

**Step 6:** Recycle all packaging in accordance to local regulations.