
## **Desktop Protective Screen / DPSXXXX-F Freestanding Unit**

Installation Instructions

wrench provided.

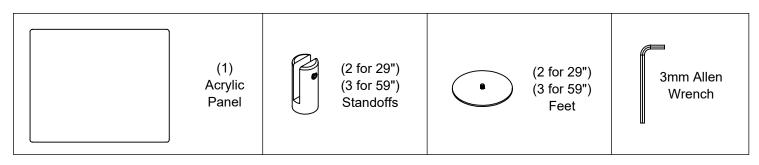


**Step 1:** Remove and unpack the Arylic Panel, Feet, and Hardware.




Step 2: Screw the panel brackets on to the feet.

Step 3: Lay the Acrylic Panel onto a clean flat surface. Slide the feet unto the lower edge of the acrylic panel.

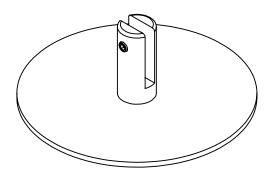

ghert. 0

**Step 4:** Attach the feet to the acrylic panel by Step 5: For a secure mechanical attachment tightening the screw on the front of the bracket, remove the lining from the tape on the bottom of the foot. Apply unit to table top surface with pressure to secure.

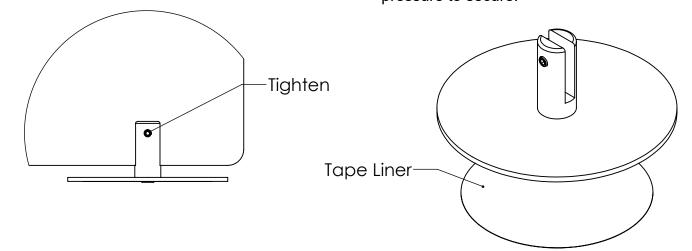

**Step 6:** Recycle all packaging in accordance to local regulations.